


Retort Furnace Cooling Systems

Indirect cooling (hot-wall retort furnaces)

- Ambient air is blown onto the outer retorte surface to cool it down. The waste heat is removed via the exhaust air outlet of the furnace.
- The charge is cooled indirectly, which means that the atmosphere in the retort is not affected by the cooling
- The charge cannot be quenched with the cooling system

Direct cooling (cold-wall and hot-wall retort furnaces)


- Rapid gas cooling in the retort. For this purpose, the furnace atmosphere is circulated through a heat exchanger.
- The system pressure is not increased by the cooling; there is no gas quenching at high pressure
- Not available for processes with flammable furnace atmospheres

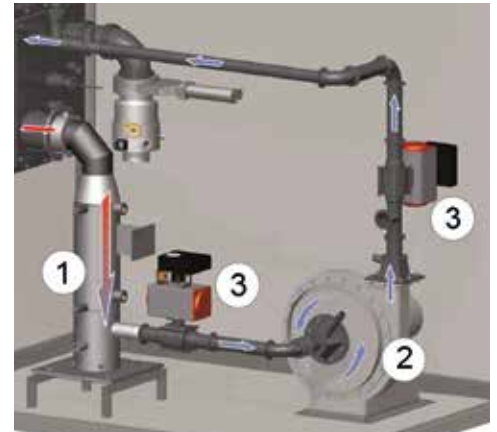

Schematic presentation of rapid gas cooling


- 1 Gas heat exchanger
- 2 Radial fan
- 3 Shut-off valves

Cooling Behavior of Hot-Wall Retort Furnace with Charge (Example)

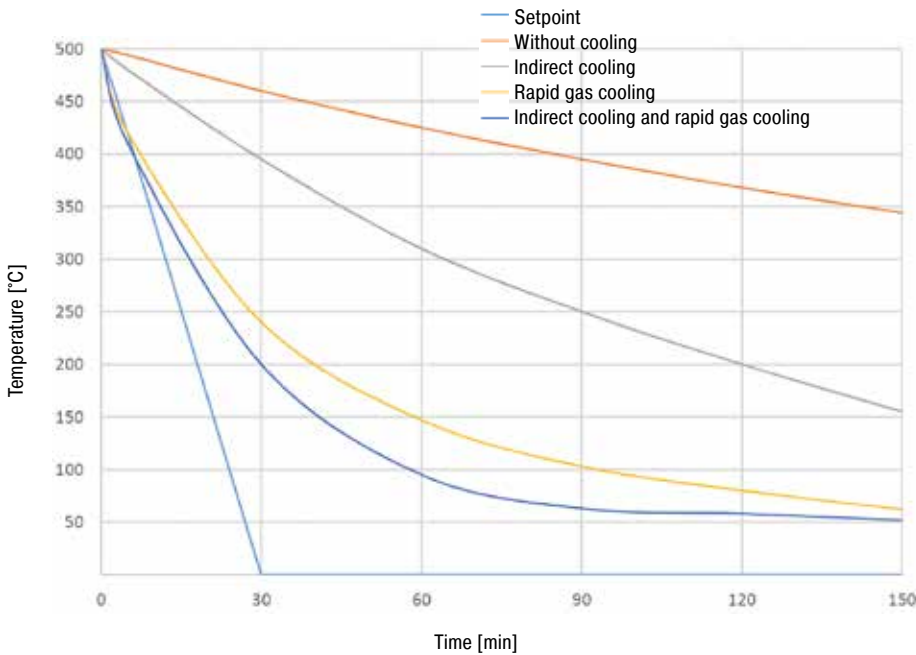

Fan cooling, hot-wall retort furnace NRA 400/03

Cooling Behavior of Cold-Wall Retort Furnace with Charge (Example)

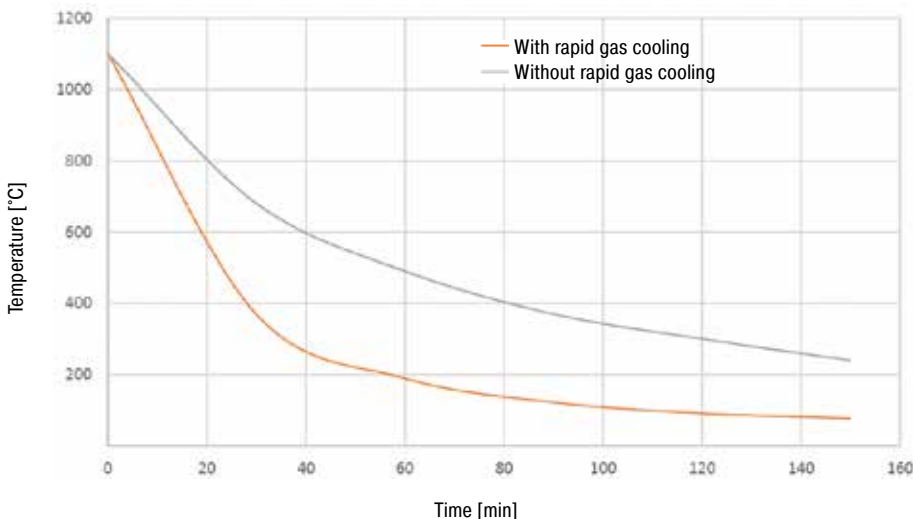

Rapid gas cooling, cold-wall retort furnace VHT 8/16-MO